

The Waving Wand product features & warranty information

This product comes with a 12 month manufacturers warranty. In order to qualify for your 12 month manufacturers warranty you must activate it by registering your product on line @ www.cloudninehair.com within 14 days from date of purchase. This does not affect your consumer rights.

Please read this section carefully before you use your new styling product. For full product information, styling hints, tips and to register your product or for helpdesk information, visit www.cloudninehair.com.



- 1 - Ceramic barrel
- 2 - Stand
- 3 - Power switch
- 4 - Temperature indicator
- 5 - Auto mode button



The Waving Wand product safety

Don't use your styling product near water.

Don't contaminate any part of your product with any chemical, hair colour or dye.

Don't use on wet hair.

If the wand is damaged in any way it must be repaired or replaced by our service centre or it's agent, do not use it, instead go to our website for help desk contact details.

Always unplug from the mains supply immediately after use.

Clean your product by gently wiping with a damp lint free cloth, do not use sprays or detergents.

Never immerse your product in water and always switch off and unplug from the mains power supply before cleaning.

General wand safety

Your wand can get incredibly hot so you really must be careful when using it.

Do not touch the barrel when it is switched on.

Keep hairsprays and styling aids at a safe distance away from your wand.

Always wear the protective glove when using your wand on the hand which you use to wind the hair around the barrel of the wand.

Safety features

Hibernation mode - The intelligent sleep technology within the Waving Wand will automatically work when it has been switched on but not used for a period of 30 minutes. Once in hibernation mode you'll notice that the temperature panel will occasionally flash a green light to remind you. However during this mode the actual wand will cool down. When you're ready to use your wand again simply switch it off and back on again

Voltage

The Cloud Nine Waving Wand can be operated with a mains voltage ranging from 200-240 Volts ac 50/60Hz, 50w.

Operation Failure

If your styling product fails to work please follow this guide:

Check that your product and the power supply are switched on

If your product, cable or plug become damaged in any way stop using it immediately and return your product to our service centre for repair

Under no circumstances should you or anyone else tamper with the product as this will invalidate your warranty

Remember

It's important that you never use your styling product for anything other than styling hair as directed in the quick start guide. Your product has been specifically designed for this purpose and using the product for any other purpose could be dangerous.

User Advice

Please remember to keep your original proof of purchase in a safe place. This product benefits from a 12 month warranty, subject to terms and conditions.

This appliance can be used by persons aged from 16 years and above. If persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge use this product, an adult responsible for their safety must ensure that they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, or it's service agent in order to avoid a hazard.

Model No. C9-WI 1.0



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



This marking indicates that this product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Using the Waving Wand to create glamorous waves...

- Always wear the protective glove provided on the hand you use to wind hair around the wand barrel.
- Plug into the mains power and turn on by pressing and holding the power button down for two seconds. The auto light will turn blue and the MED light will flash red. The MED light will remain green once the MED temperature is reached. To select the LOW or HIGH temperatures, press the power switch again until the selected temperature flashes red. The indicator will turn green once the selected temperature is reached. You can now begin styling.
- Always use the wand on clean, dry hair.
- Should you require a higher or lower temperature during styling, press the power button again until the selected temperature flashes red. The indicator will turn green once the temperature is reached. This allows time for the wand to cool down or heat up sufficiently.
- When the wand is in AUTO mode, it will automatically heat to the MED setting when switched on. To change the AUTO mode to manual, hold down the AUTO button for two seconds, whilst the wand is switched on. The blue AUTO light will turn off. The wand is now in manual mode and will start on the last used temperature setting when turned on. To return the wand to AUTO mode, hold down the AUTO button whilst the wand is switched on. The AUTO light will remain blue.
- Once you have finished styling, turn the power off by pressing the power button for two seconds until the green indicator light has gone off and unplug from the mains power supply.
- Never wrap the cord around the wand
- The wand also has a kick stand integrated into the back of the handle. To use the stand, lift the stand with the tip of your finger and extend out towards the barrel. Place on a flat surface. Replace the stand into the handle before styling.
- Your Cloud Nine wand is supplied with a standard two pin Europlug but has been fitted with a UK 3 pin adaptor. To use your Wand in a country outside of the UK, simply remove the screw that is positioned between the 3 pins and remove the adaptor from the 2 pin plug.

Also by Cloud Nine®:

The Standard and Wide Irons by Cloud Nine® will help you create your perfect style. Smooth, flick, curl or straighten at a temperature to suit your hair type.

The Micro Iron by Cloud Nine® is perfect for shorter hair or styling on the move. Measuring just 6 inches long but with all the quality and technology you need.

The Wand by Cloud Nine®, sculpt beautiful and professional curls, with one-touch temperature control

TheO by Cloud Nine® creates volume in an instant. TheO rollers heat up in seconds and easily grip in place. All you have to do is decide how much volume you want.



CLOUD NINE®

UNIL C9 LTD
PO BOX 302, ILKLEY, LS29 1ET, UK

www.cloudninehair.com

WW QSL UK

UK



CLOUD NINE®

Style Infinity

The Waving Wand - for glamorous waves

**Quick start
and safety
guide**